

## Model HM Filter Changing Instructions and Internal View

1. Turn the air cleaner over on a soft surface such as a rug.
2. Remove the four retaining screws with a Phillips head N2 screw driver
3. Pull out the large filter by grasping the ring from the corner area of the unit.
4. Remove the prefilter
5. Install your new filter by reversing the above procedure

